

PC1061 CD / MP3 Player



Description

The PC1061 is a multimedia player that supports a variety of audio playback including CD,MP3,MP4,VCD,DVD,WAV player, with full touch button control, and high-brightness background LCD screen display for clear status display; with the function of monitoring volume adjustment, it can be remotely controlled by PC series and Network PA Host.

Features

- CD/MP3/MP4/VCD/DVD/WAV player function.
- VFD display.
- Can select any song or any paragraph for play.
- With USB port, can connect USB flash disk, hard disk and other memory device.
- After the POWER ON it will play in order automatically.
- Support PC and Network PA Server remote control.
- Has the function of monitoring volume adjustment.
- The audio can be transmitted to the network host through the network as one of the host audio sources.

Specifications

Model	PC1061
Frequency Response	20Hz-20kHz (±3dB)
Signal to Noise Ratio	>75dB
THD	0.2%
Wow & Flutter	0.01%
Output Level	-3dBV
Protection	AC fuse
Power Supply	AC220V/50Hz
Package Size (mm)	(L×W×H) 555×455×185
Machine Size (mm)	(L×W×H) 484×320×88


Gross Weight

8.7kg

Net Weight

6.9kg

Front / Rear Panel

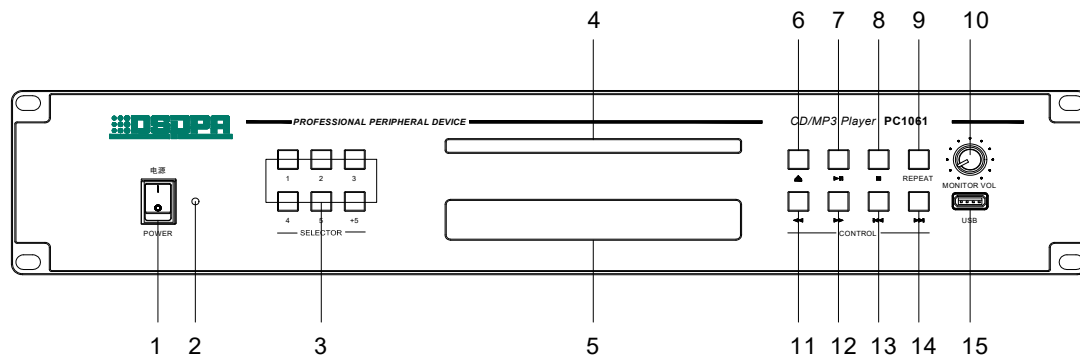

1 Power Switch

Press 1 is power on and press 0 is off.

2 Power Indicator

When turning on the power, the indicator lamp is on; when turning off the power, the indicator lamp is off.

3 (1 ~ +5) keys

Press 1-5 to directly select track 1-5, press +5 and then 1-5 to select more than 5 tracks, each press +5 will add 5 tracks. For example, to select the 12th track, press the +5 button twice and then press the 2 button.

4 Record door

CD/MP3/MP4/VCD/DVD/WAV records are placed in the record tray from here.

5 VFD display

Displays the working status of the device.

6 Entry/outbound key

Press this button to pop up the disc, which can be loaded and unloaded. Pressing this button again will automatically feed the disc to close the door.

Note: Please do not force the disc tray manually to

avoid damage to the movement.

7 Play/pause button

Loading a record will play automatically when the device is in the default state. If you press this button at this time, playback will stop, and pressing it again will start playback from where it was paused.

8 Stop Keys

Pressing this button during any playback will stop playback.

9 Repeat keys

10 Monitor volume adjustment knob

Rotate clockwise for volume up and counter-clockwise for volume down.

11 Fast forward


12 Fast backward

13 Previous song

14 Next song

15 USB jack

It can be connected to a USB flash drive, a mobile hard disk and other memory devices to play MP3 programs on the memory.

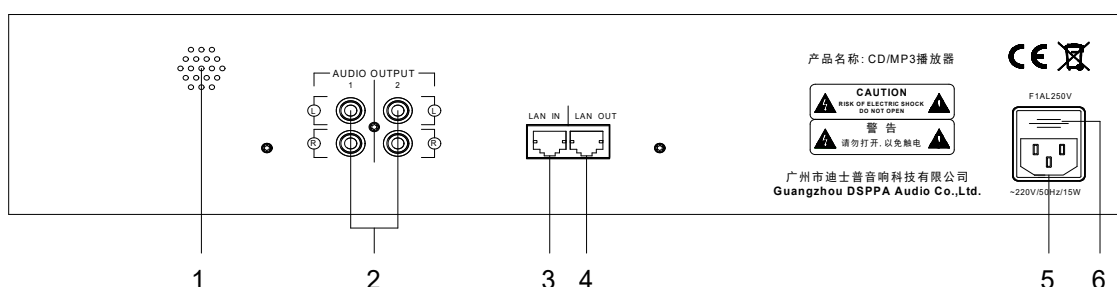

1 Monitor Speaker

2 Audio Signal Output Socket

Used to connect the audio signal from this unit to the line connector in the next unit.

3 Network Input Interface

LAN or PC remote control input interface

4 Network Output Interface

Connect to the remote control signal input port of the next device.

5 Power Socket

Plug the AC power cord into this outlet.

6 Power Fuse

If the fuse is blown, replace it with the same specifications. If it is blown continuously, check the wiring.

Note: The DVD of this device only outputs the audio part and has no video playback function.